



Disassembling Samsung HMX-W300

How to disassemble the camera.

Written By: Robert



INTRODUCTION


Shows how to open up the camera without damaging interior content.



TOOLS:


- [1.5mm Hex Screwdriver](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Remove wristband

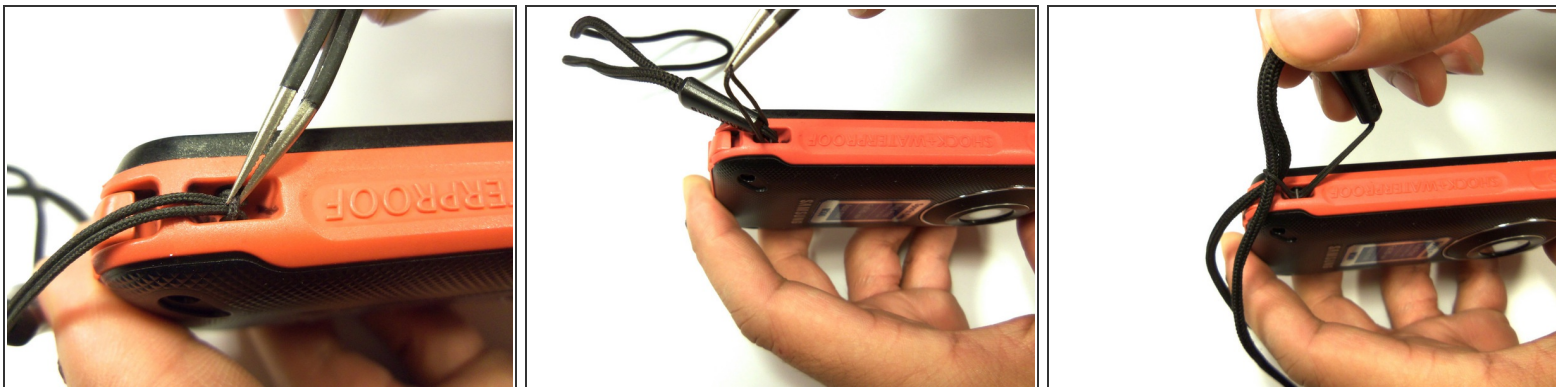

- To remove the wristband of the device, grab the middle loop and pull. Pull the band through as shown in the picture.

Step 2 — Front case screw removal

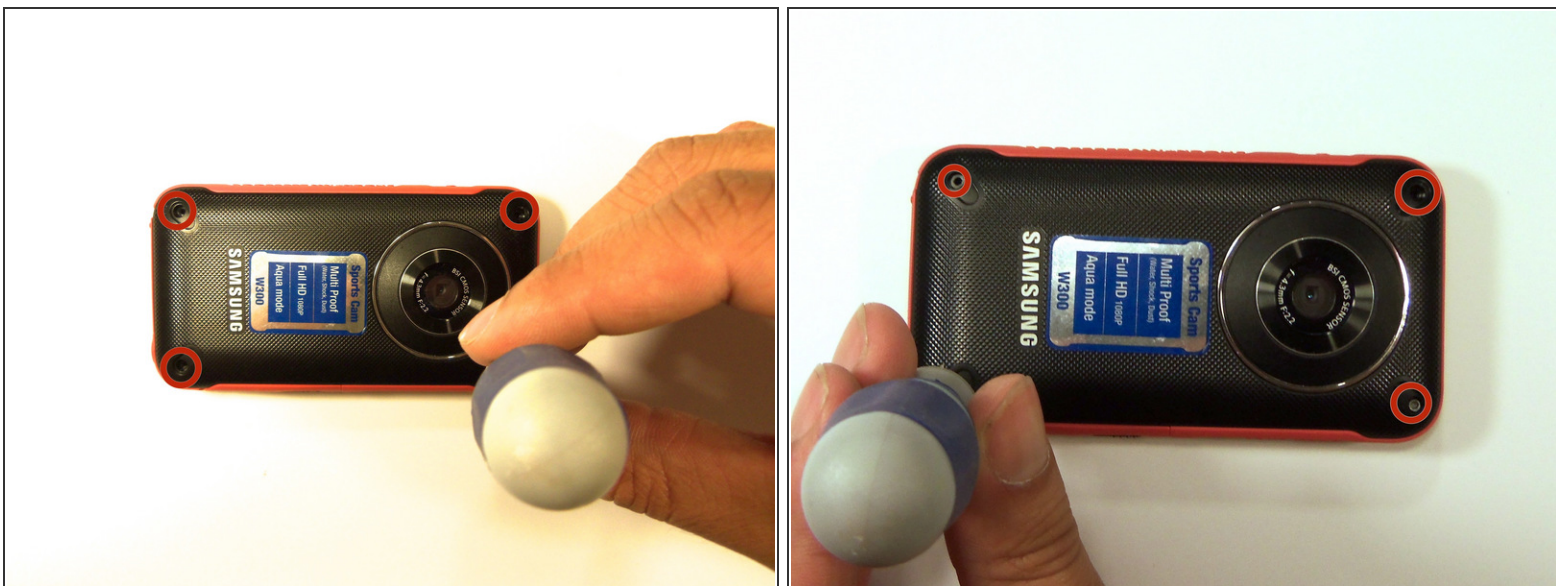


- Remove all four Hex screws with a Hex 1.5 mm screwdriver.

Step 3 — Remove HDMI screw



- To remove the HDMI screw, open the HDMI door on the side. Remove the screw using a Phillip size 00.




Step 4 — Open front case.

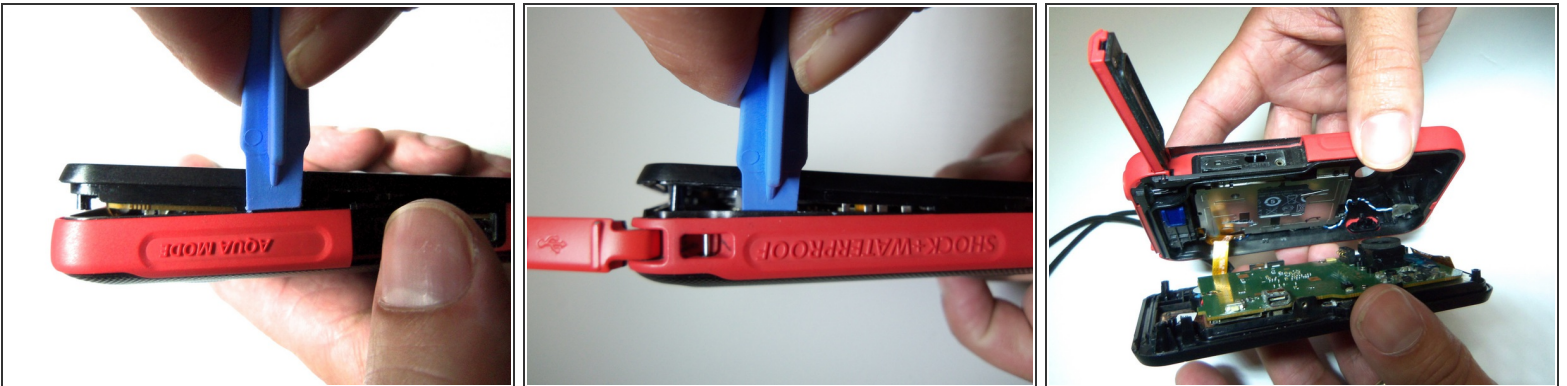

- As shown in the picture, use the plastic opening tool on both sides on the device. Pry apart both parts.

⚠ Do not pry apart the device too hard. There is a wire that attaches the front case with the rear case.

Step 5 — Unplug wire.

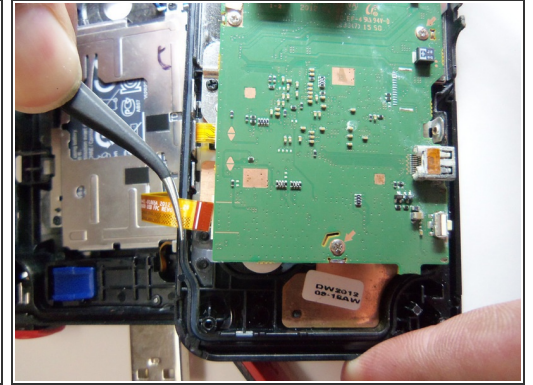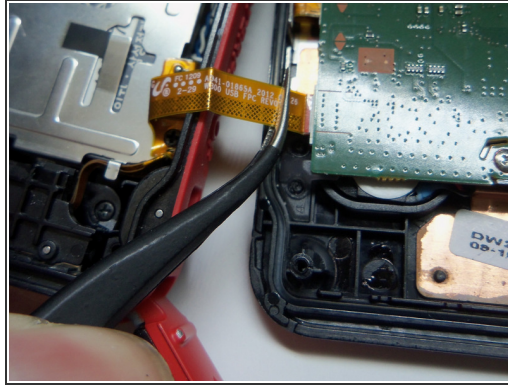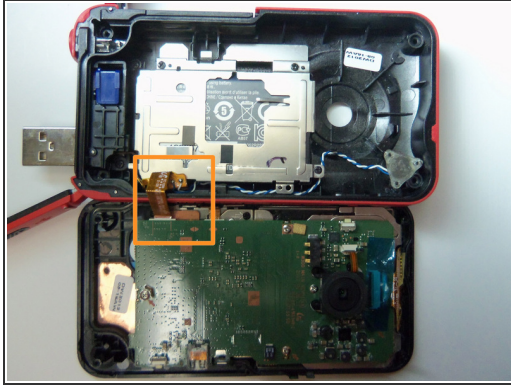

- Pull the wire ribbon out with a pair of tweezers.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-10 12:37:01 PM.